

FSSP Dual Point Receive/Distribute Instruction Manual


120K FSSP System and 300K FSSP System



Opposing Distribution and Receive

120K FSSP DUAL POINT (Part Number 1052-02851-SYS)


Item	Part Number	Description	Qty
1	1013-00368-201	20K All-Terrain™ Berm	6
2	1052-02422-201	8 ft x 8 ft Modular 4-Way Intersection	16
3	1052-02323-201	4 ft x 20 ft Modular Middle Section (MMS)	44
4	1012-00894-ACDC	AC/DC Adapter	19
5	1052-02423-201	8 ft x 8 ft 2-Way Junction	2
6	1052-02322-201	4 ft x 2 ft Modular End Cap	20
7	1052-02400-201	4 ft x 20 ft Modular End Berm Section (EBS)	12
8	1052-02424-201	Modular Distribution Point Berm, 3-Sided Fail-Safe®	2

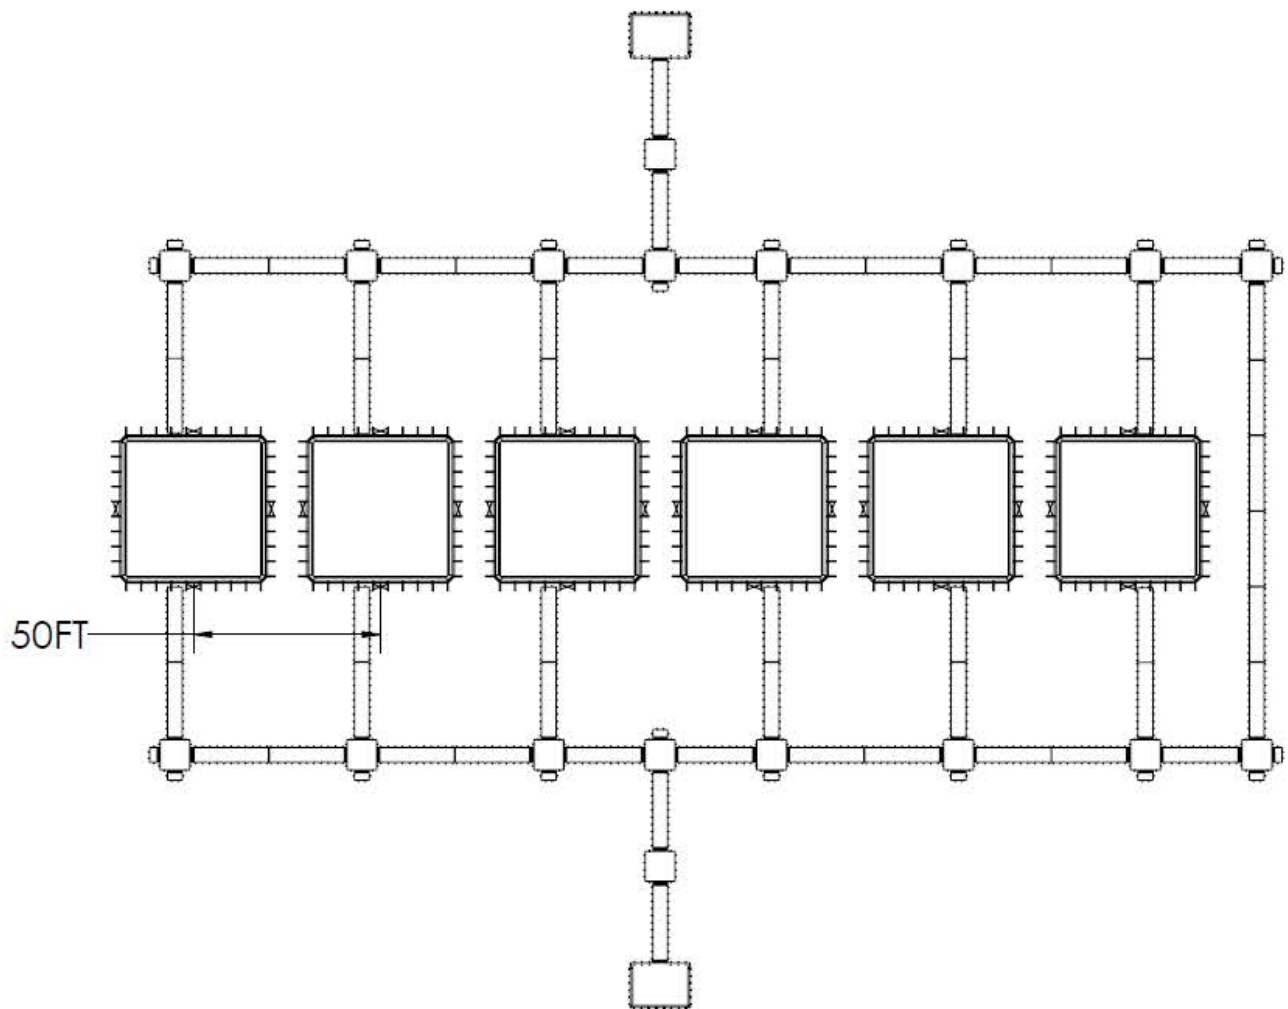

Opposing Distribution and Receive

300K FSSP DUAL POINT (Part Number 1052-02851-SYS)

Item	Part Number	Description	Qty
1	1013-00369-201	50K All-Terrain™ Berm	6
2	50k Bladder	50K Tank (shown for reference only)	6
3	1052-02422-201	8 ft x 8 ft Modular 4-Way Intersection	16
4	1052-02323-201	4 ft x 20 ft Modular Middle Section (MMS)	46
5	1012-00894-ACDC	AC/DC Adapter	20
6	1052-02423-201	8 ft x 8 ft 2-Way Junction	3
7	1052-02322-201	4 ft x 2 ft Modular End Cap	20
8	1052-02400-201	4 ft x 20 ft Modular End Berm Section (EBS)	12
9	1052-02424-201	Modular Distribution Point Berm, 3-Sided Fail-Safe®	2

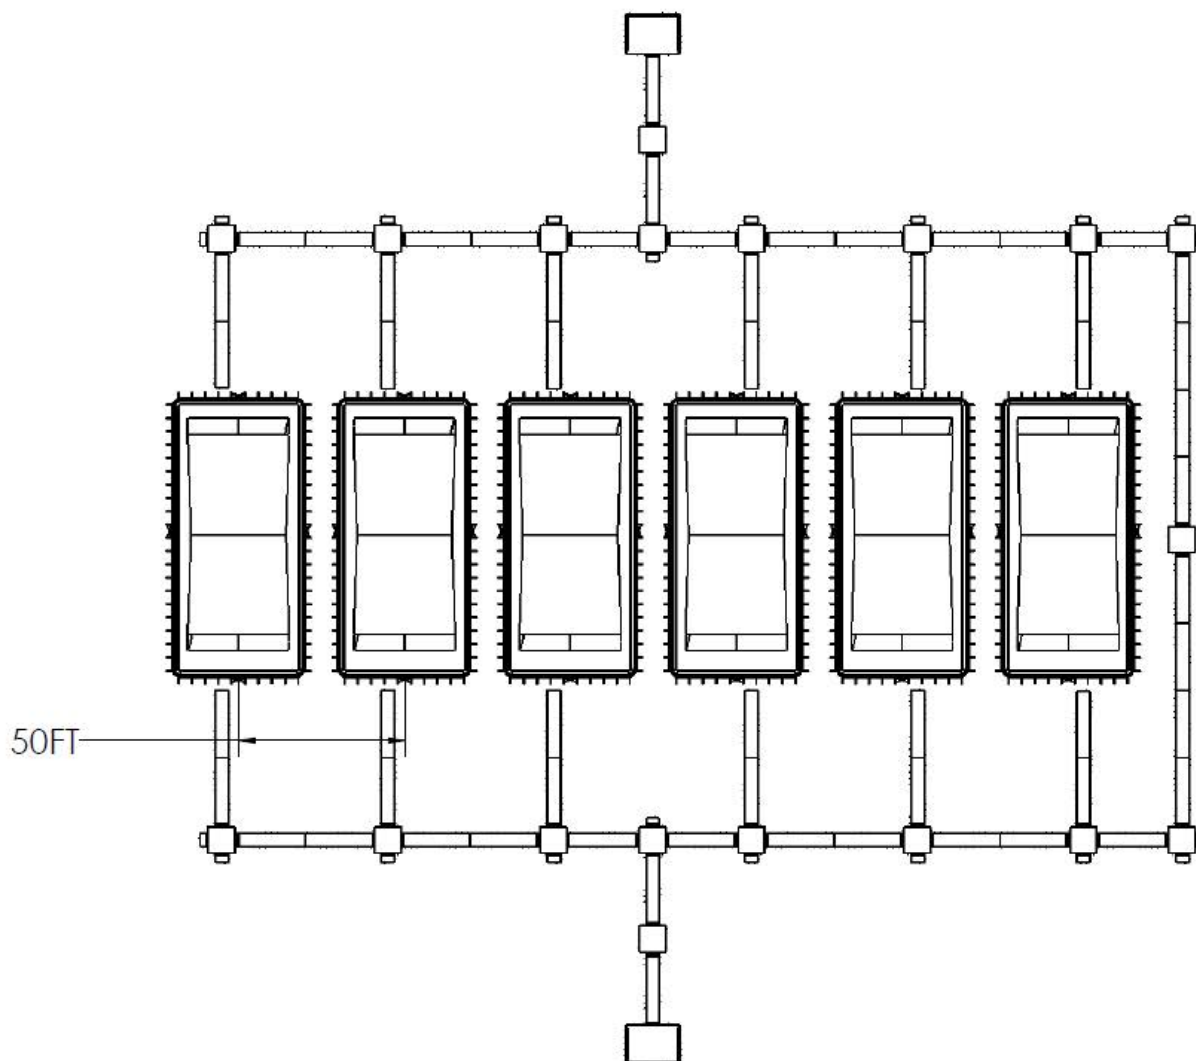

Box Contents

120K FSSP DUAL POINT (Part Number 1052-02851-SYS)

		BOX																
Description	Part Number	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17
Maintenance Kit	1012-01646-KIT	1	1	1	1	1	1	1	1	1	1	1	1					
Tie Down Stakes	—	23	23	23	23	23	23	23	23	23	23	23	23					
HFF Berm Drain Kit	—	6	6	6	6	6	6	6	6	6	6	4						
4 ft x 20 ft x 8" BC5CF EBS END SECT Type 2 Tan Tags	1052-02400-201	4	4	4	—				—		—		—		—		—	—
8 ft x 8 ft x 8" BC5CF 4 WAY INTERSEC Type 4 Blue Tag	1052-02422-201	—	—	—	4	4	4	4										
12 ft x 14 ft x 12" 3 SIDE FAILSAFE Type 6 Orange Tag	1052-02424-201								2									
8 ft x 8 ft x 8" BC5CF OS W/2 ZIP INTR Type 5 Yellow Tag	1052-02423-201										1	1						
4 ft x 2 ft x 8" BC5CF MOD END CAPS Type 7 Red Tag	1052-02322-201							—	—	—	—	10	10					
4 ft x 20 ft x 8" BC5CF MMS MOD MIDDLE Type 1 Black Tags	1052-02323-201											—	1	1	6	6	6	6
AC/DC ADAPTER POLY 4 ft with AC/DC Male Buckles with AC/DC Female Buckles	—									—	25	—						


300K FSSP DUAL POINT (Part Number 1052-02850-SYS)

		BOX																		
Description	Part Number	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	
Maintenance Kit	1012-01646-KIT	1	1	1	1	1	1	1	1	1	1	1	1							
Tie Down Stakes	—	23	23	23	23	23	23	23	23	23	23	23	23							
HFF Berm Drain Kit	—	6	6	6	6	6	6	6	6	6	6	4								
4 ft x 20 ft x 8" BC5CF EBS END SECT Type 2 Tan Tags	1052-02400-201	4	4	4	—				—	—	—	—	—	—	—	—	—	—	—	
8 ft x 8 ft x 8" BC5CF 4 WAY INTERSEC Type 4 Blue Tag	1052-02422-201	—	—	—	4	4	4	4	—											—
12 ft x 14 ft x 12" 3 SIDE FAILSAFE Type 6 Orange Tag	1052-02424-201				2	—	—	—	—	—										
8 ft x 8 ft x 8" BC5CF OS W/2 ZIP INTR Type 5 Yellow Tag	1052-02423-201				—	—	—	—	—	—	2									1
4 ft x 2 ft x 8" BC5CF MOD END CAPS Type 7 Red Tag	1052-02322-201										10	10	—	—	—	—	—	—		
4 ft x 20 ft x 8" BC5CF MMS MOD MIDDLE Type 1 Black Tags	1052-02323-201										—	—	—	—	—	—	—	—	—	—
AC/DC ADAPTER POLY 4 ft with AC/DC Male Buckles with AC/DC Female Buckles	—									—	—	—							25	

System/Box Identification

The **(A)** left hand tag is branded with the system Serial Number. In addition, this number is spray painted on the lid of each box. The serial number is a 6 digit number in the form of XXXXX-Y, corresponding to the sales order number XXXXX and the item number -Y.

(B) Yellow tags are branded "BOX-(1A thru #)" with the box number

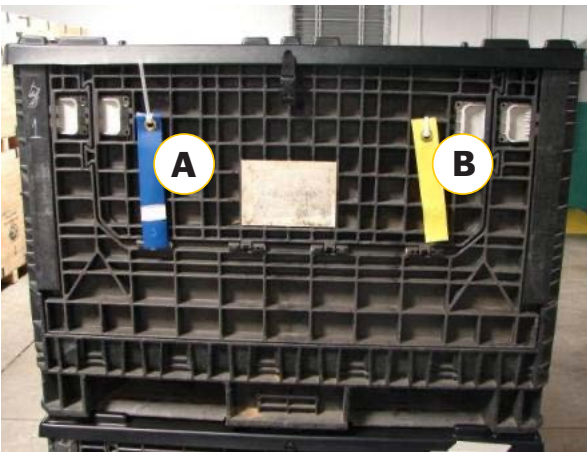


Berm Identification (color code)

Ref-Part # BCI-MOD-FSSP-50K-1S
 Color tag located on last strap indicates berm type

4 ft x 20 ft x 8" BC5CF MMS MOD MIDDLE	Black Tags	Type 1
4 ft x 20 ft x 8" BC5CF MMS MOD MIDDLE	Tan Tags	Type 2
4 ft x 6 ft x 8" BC5CF RIGHT ANG	Gray Tags	Type 3
8 ft x 8 ft x 8" BC5CF 4 WAY INTERSEC	Blue Tag	Type 4
8 ft x 8 ft x 8" BC5CF OS W/2 ZIP INTR	Yellow Tag	Type 5
12 ft x 14 ft x 12" 3 SIDE FS	Orange Tag	Type 6
4 ft x 2 ft x 8" BC5CF MOD END CAPS	Red Tag	Type 7



(C) Grommet tag located at last strap of berm

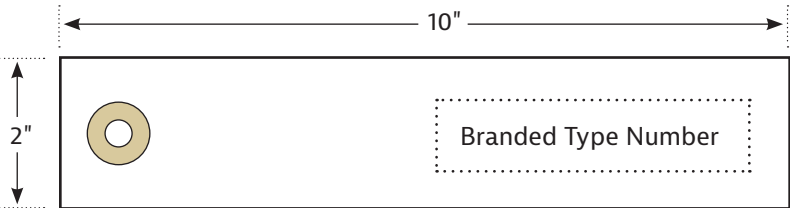

Berm Identification



Type 1 MMS 20 ft section



Type 2 EBS 20 ft section



Type 3 Right Angle



Type 5 8 ft x 8 ft (2 way junction)
Type 4 is similar four-way intersection



Type 6 12 ft x 14 ft x 12" Fail-Safe®



Type 7 4 ft x 2 ft End Cap

Berm Accessories



2 ft x 6 ft 18 oz Ground Mat for use when joining zipper assemblies in dirt/sand environment




AC/DC Zipper Adapter for track orientation reversal




3 ft x 14 ft Belting Material for use with the Fail-Safe® (Type 6) 3 as ground mat, 3 as interior berm protection

Zipper Instructions

(Alignment and Lubrication)

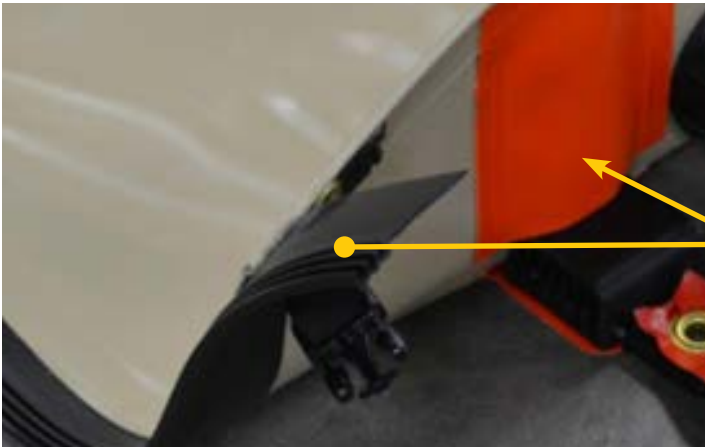

Orange Strap Indicates Tracks Up

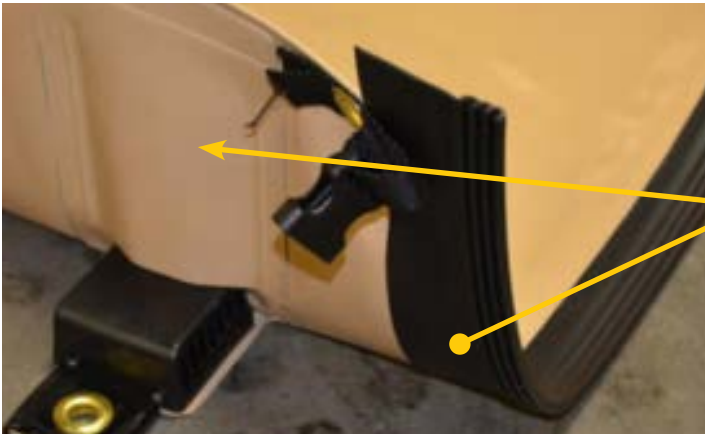

Tan Strap Indicates Tracks Down



In general, matching an Orange Support Strap with a Tan Support Strap will ensure proper installation of zipper assembly. AC/DC zipper adapter can be used when an Orange to Tan combination cannot be made.

Clean and lubricate zipper using the cleaning brush and silicone spray provided in Box 1 if using for the first time or if tracks have become contaminated with sand/dirt.

Zipper Instructions

(Zipper Tool Insertion and Operation)



Align a zipper set so that you are mating track up to track down (orange to tan straps)



Align the edge of the berm, making sure that the TRACK UP side is to your RIGHT



Fold back right side of zipper track and insert the zipper tool into the TRACK UP side as shown. (Cam tool is open at this time)



Insert TRACK DOWN side between the cam roller and the TRACK UP side until the berm edges are aligned.

Zipper Instructions

(Completing the Closure)

Close the cam action as shown. While holding on to the closed zipper section that extends past the roller, pull the roller's lanyard parallel to the zipper and towards your body as shown below. When the roller is pulled off the opposite end, you are finished. Check and make sure a complete seal has been created over the length of the zipper. Stand up walls and insert the retention clips.



AC/DC Zipper Adapter Use

The AC/DC Zipper Adapter is used for mating track sets that are oriented in the same direction. Follow the zipper tool instructions shown on previous slides. You will have to zip once from one direction and then from the opposite direction so that you can orient the TRACK UP side to your RIGHT as shown in the zipper tool instructions.

(A) Clip the Retention Buckle Extensions for additional wind zipper strength.



Hydrocarbon Flow Filter (HFF) Berm Drain Kit

The HFF kit removes hydrocarbons to allow safe rainwater drainage. The polymer technology inside the HFF solidifies hydrocarbons while allowing rainwater to pass through freely. In the event of a major spill, the HFF will completely shut off flow, preventing any hydrocarbons from escaping the spill containment berm.



Box Features



All Boxes
Feature a Lid
Retention Strap




Box Contents

1 Mallet, Cleaning brushes



Box Contents

Silicone Spray Lubricant, Spike Pouch (6 spikes per modular component)

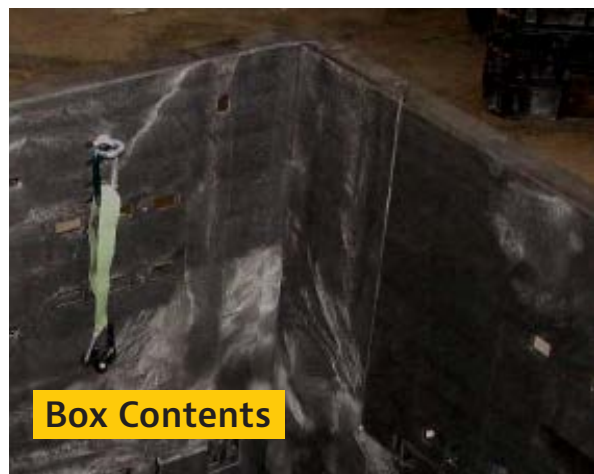


Box Contents

Zipper Tool

Fold Instructions Type 1

(MMS) dashed lines indicate fold lines

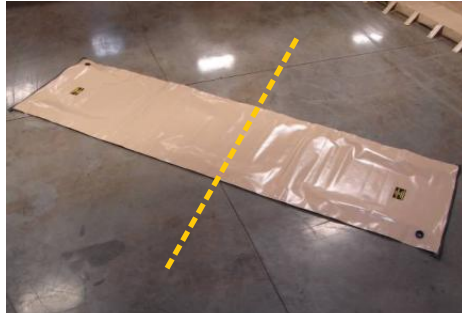

Fold Instructions Type 2

(EBS) dashed lines indicate fold lines




Fold Instructions Type 3

(Right Angle)



Fold Instructions Type 4 and Type 5

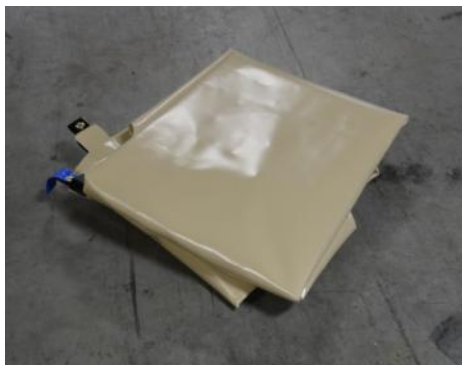

Fold Instructions Type 6

(12 ft x 14 ft Fail-Safe®) dashed lines indicate fold lines



Fold Instructions Type 7

(4 ft x 2 ft End Cap)



For technical questions or replacement parts, please contact:

Basic Concepts, Inc.

1310 Harris Bridge Rd., Anderson, SC 29621-3410

800-285-4203 toll free | BasicConcepts.com